
Air Bank Firmware upgrade guide:

Step1:

Please go to PQI website, find the latest version Firmware and download into your PC.


http://www.pqigroup.com/prod_driver.aspx?mnuid=1286&modid=138&prodid=530

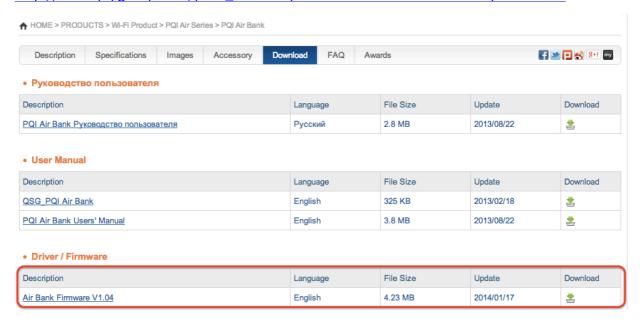

Step 2:

Download the file into your PC and unzip it. Please find the "fw.bin".

Put the file into Air Bank by cable.

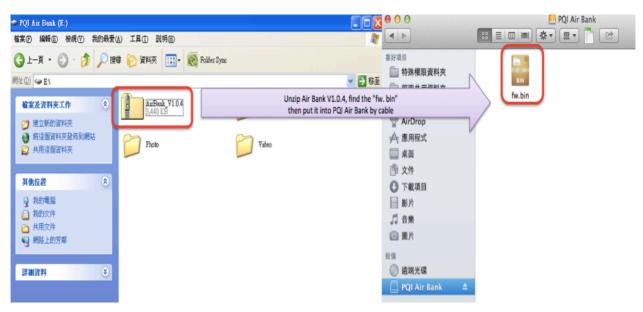

Step 3:

Remove the Cable, then Power ON the Air Bank, Please check the Wifi Indicators on. (Blue blinking). Find the Wifi of "PQI Air Bank" and connection.

Please note: the default SSID is "PQI Air Bank".



Step 4:

Please open the web browser and key into the IP address "192.168.100.1". find the button of "Firmware upgrade" the click it. Waiting around 3 minutes.



Step 5:

Please rescan the Wifi signal, find the PQI Air Bank wifi signal reboot again.

Please find tiltle of "Firmware upgrade completely, rebooting now" then confirm the Firmware version correctly as below blue column.

